


TACMOLLE


PRODUCT INSTALLATION MANUAL

TRUCK BED CARGO RACK

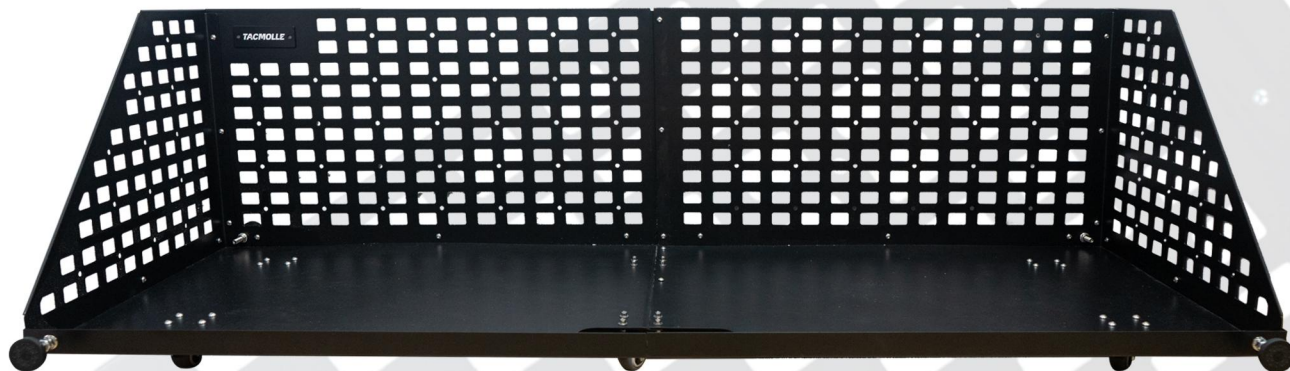


20745

PACKAGE INCLUDED

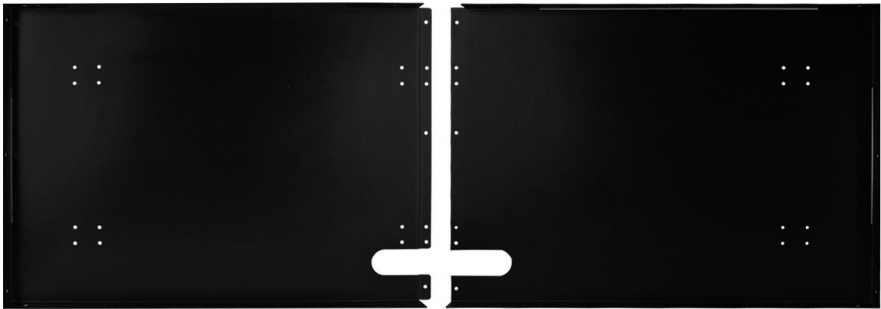


①

②

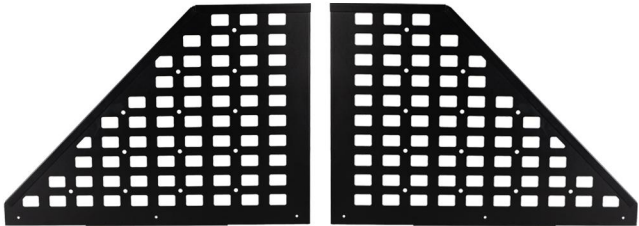

③

④

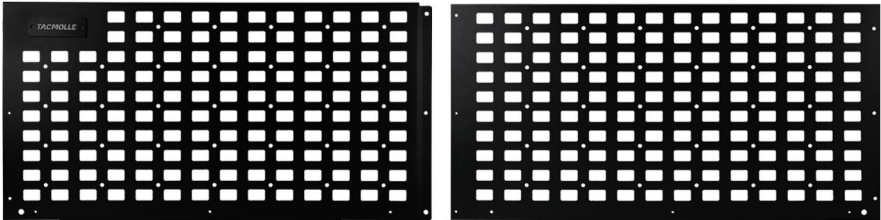

⑤

⑥



⑦



⑧



⑨



⑩



⑪



⑫



⑬



⑭



⑮




⑯




⑰


INSTALLATION INSTRUCTIONS

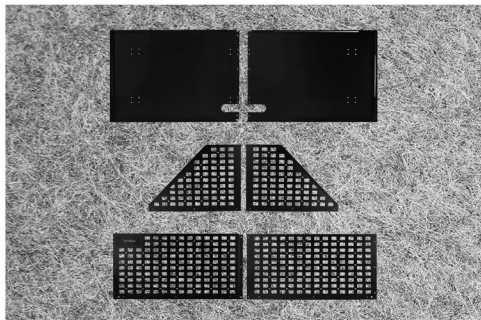


1. Prepare all parts and tools needed for installation.

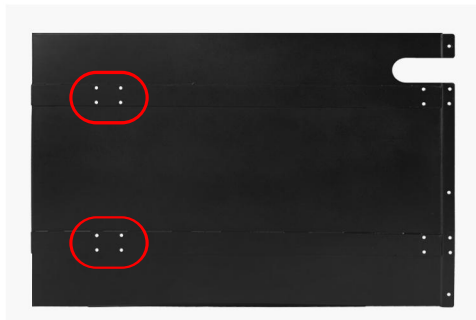


2. Prepare to install ⑦ on the holes marked in red of ① and ②.

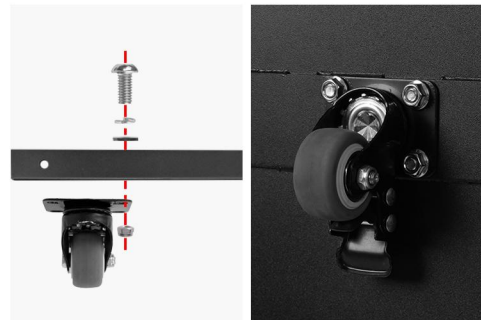

3. Connect ⑬, ⑦, ①, ⑭, ⑯, and ⑨ in sequence then tighten.
Note: ⑬ and ⑦ should be installed at the bottom of the ①.

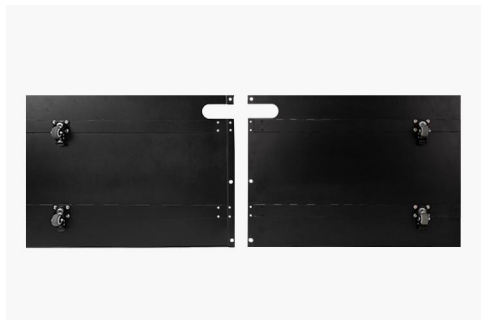

4. Repeat the same steps to install the other three ⑦. Installation effect.

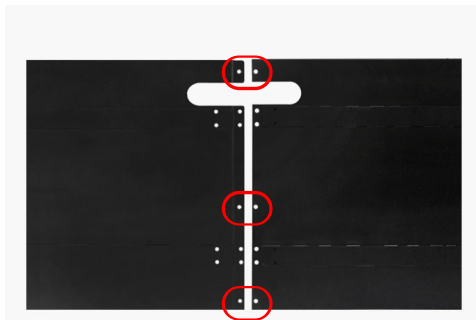


5. Prepare to connect ① and ②, align them with the holes marked in red.




6. Tighten ⑮, ⑰, and ⑩ in sequence in three holes.


INSTALLATION INSTRUCTIONS

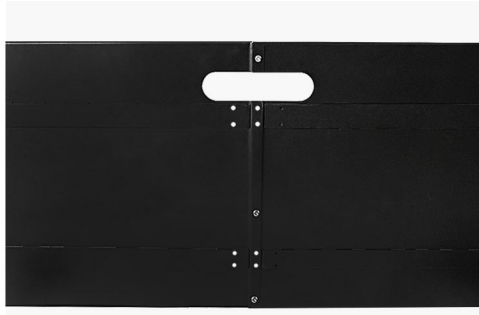

7. Connection view.

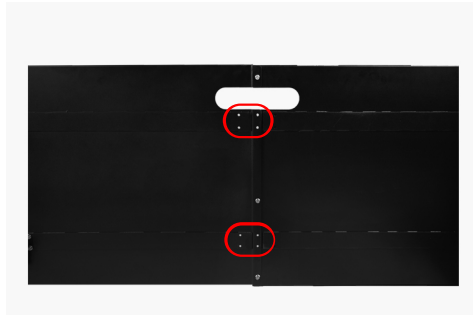


8. Prepare to install the other two ⑦ into the holes marked in red.

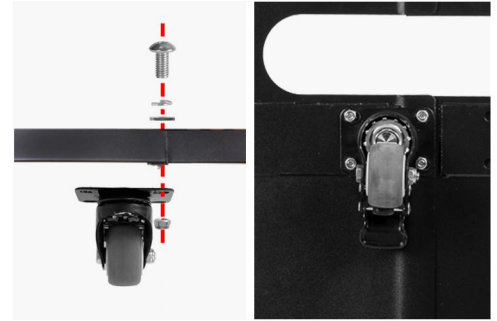


9. Connect ⑬, ⑦, the ①-② assembly, ⑭, ⑯ and ⑨ in sequence, then tighten.



10. Repeat the same steps to install the other ⑦. Connection view as shown.

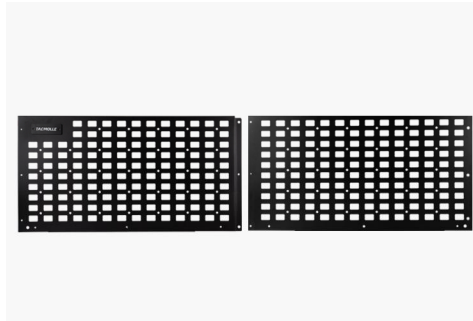


11. Prepare to connect ⑤ and ⑥.

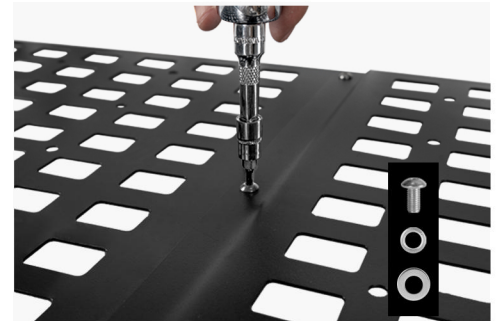


12. Connect ⑤ and ⑥, securing them with ⑮, ⑰ and ⑩ in sequence in three mounting holes.


INSTALLATION INSTRUCTIONS

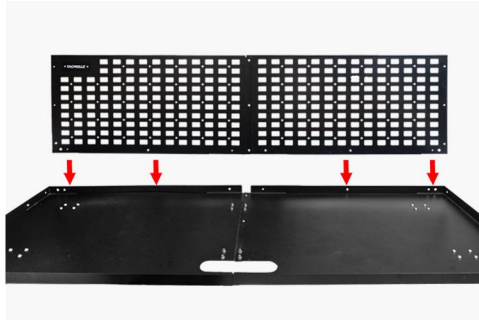


13. Prepare to connect the two assemblies. Lay the ①-② assembly flat with ⑦ at the bottom, then insert the ⑤-⑥ assembly into it.

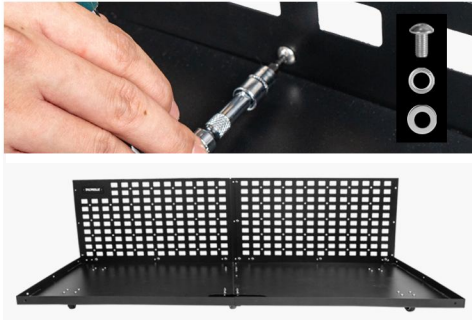


14. Tighten them using ⑮, ⑰, and ⑩ in sequence in six mounting holes.

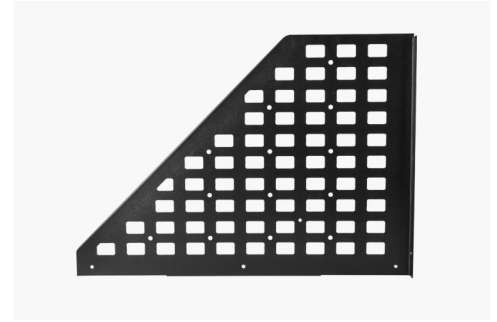


15. Prepare to install ③.

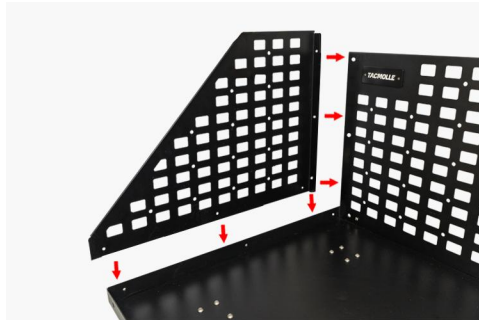

16. Insert ③ on the left side of the assembly, aligning it with the bottom and side holes.

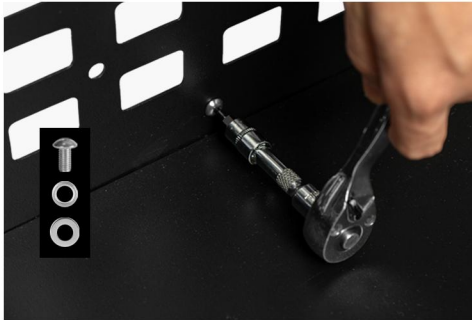


17. Tighten them using ⑮, ⑰, and ⑩ in sequence in six mounting holes.

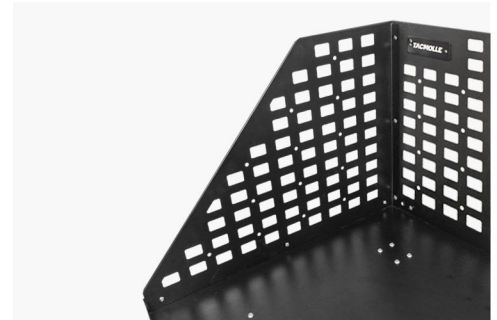

18. Installed view of the left side.


INSTALLATION INSTRUCTIONS

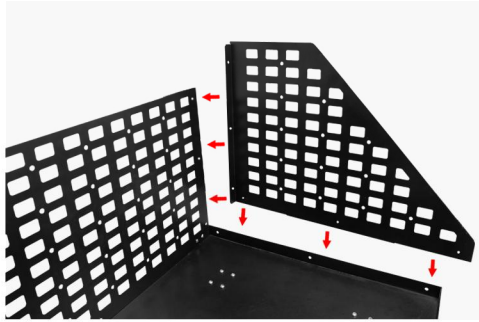


19. Insert ④ on the right side of the assembly, aligning it with the bottom and side holes.




20. Tighten them using ⑮, ⑰, and ⑩ in sequence in six mounting holes.

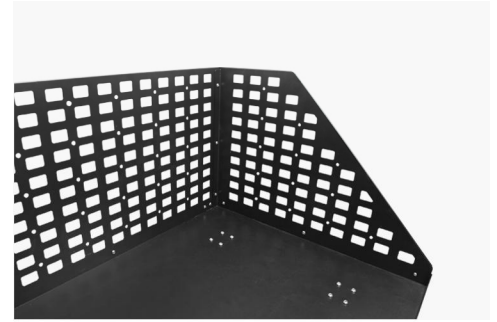


21. Installed view of the right side.

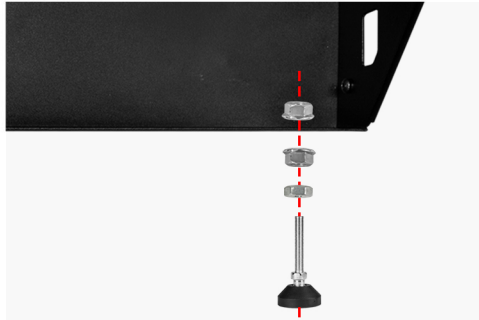

22. Connect ⑧, ⑫, and ⑪ in sequence at the front right hole. Install the second ⑪ on the inner side, then tighten them.

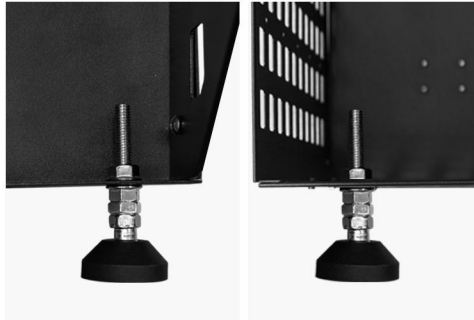

23. Repeat the same steps to install the other three ⑧. Installed view of the front and rear side.

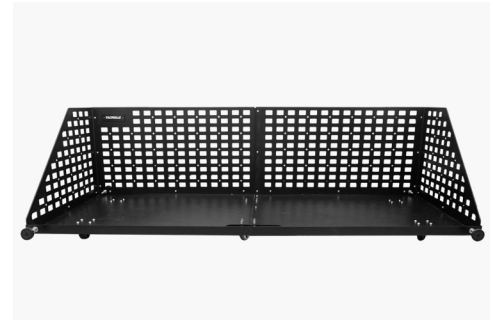

24. Installation completed.

PRODUCT DEMONSTRATION



TACMOLLE