

TACMOLLE

PRODUCT INSTALLATION MANUAL



This installation process is universally oriented.
Before installing, ensure the product is oriented correctly:
driver's side and **passenger's side**.



DRIVER'S SIDE



PASSENGER'S SIDE



PACKAGE INCLUDED




②



①

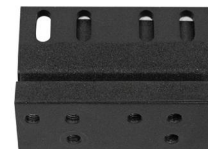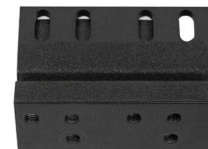

③

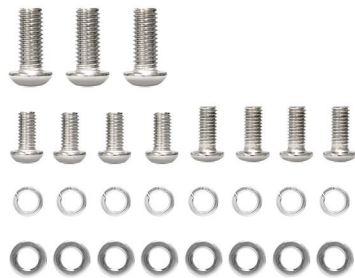

④



⑤



⑥



⑦




⑧


INSTALLATION INSTRUCTIONS




1. Place the worktable on a soft cushion and gather the required installation tools.

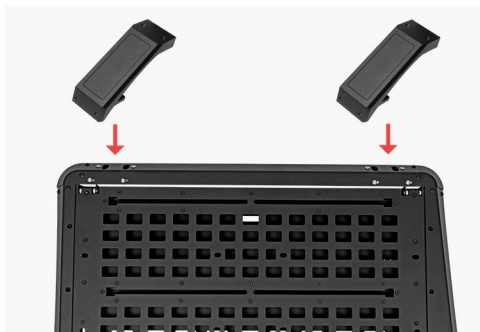

2. Prepare two ① and install them on the top of the worktable, ensuring that the hooks are facing outward.

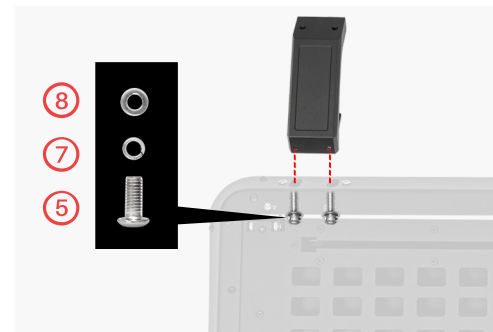

3. Sequentially connect ⑤, ⑦, and ⑧. Then, connect the MOLLE panel by inserting them into the corresponding holes for ①.

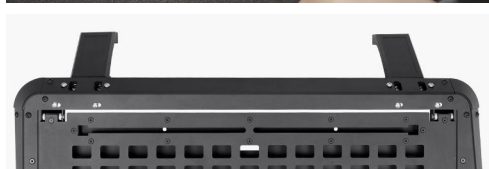


4. Refer to the diagram and fully tighten the screws to ensure a secure connection. Follow the same steps to install the other ①.



5. Remove the top.



6. As shown in the diagram, unscrew all the screw holes.

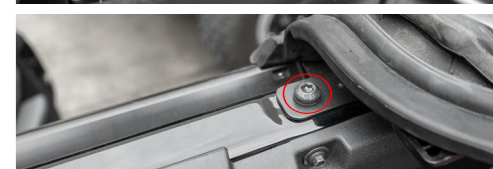

INSTALLATION INSTRUCTIONS




7. Place ③ on top and tighten it with the original screws.
Note: Ensure the screw holes on ③ are aligned properly before installing it on the left and right sides.



8. Unscrew the attached screws (④, ⑦, and ⑧) and set them aside.



9. As shown in the diagram, hang ① on the roof, and insert its auxiliary hooks into the slots on the car body indicated by the arrows.

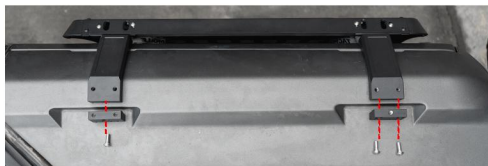

10. Prepare to install ②. Verify the number of screw holes on ①, then use ⑥ to connect the corresponding ②, but do not fully tighten the screws.



11. As shown in the diagram, align the screw holes, then tighten the screws provided with ② to secure it in place.
Note: You can adjust the position left or right according to the screw holes.



12. Firmly shake the worktable to ensure proper installation.

WORKTABLE USER GUIDE



1. Insert the key and turn clockwise to unlock (both keys can be used).
Attention: Align the key notch with the red mark on the lock hole.



2. Unlock both locks and open the worktable.



3. Lift the MOLLE panel and slide the support rod to the end of the rail. Then, push it up into the slot to lock it securely in place.



4. Lower the built-in worktable.



5. Adjust the securing flat ropes to level the worktable surface.



6. Worktable in the open state.

INSTALLATION INSTRUCTIONS FOR GAS CAN MOUNT




1. This guide is for installing your purchased gas can mount.




2. Loosen the base screws slightly, then insert the T-shaped blocks of the mounting base into the tactical slots sequentially.



3. Choose either horizontal or vertical orientation to secure the mounting base. (see Figure 4)

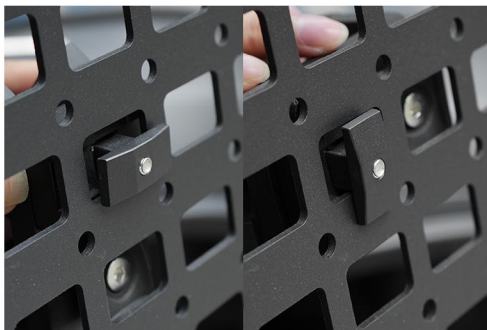

4. Refer to the illustration demonstrating how the T-shaped blocks interlock with the MOLLE panel.

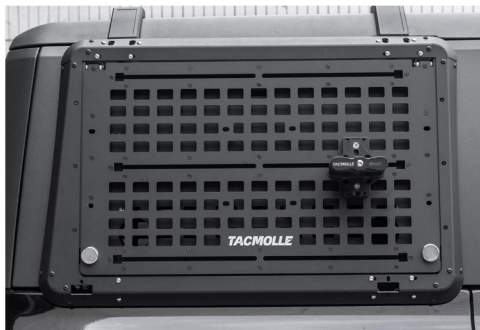

5. Secure the gas can mount in place.



6. Insert the gas can into the mount.

INSTALLATION INSTRUCTIONS FOR GAS CAN MOUNT



7. Ensure the lock buckle is fully visible.



8. Twist the lock buckle clockwise to securely fasten the gas can.



Product demonstration.

PRODUCT DEMONSTRATION



TACMOLLE