


TACMOLLE


PRODUCT INSTALLATION MANUAL

TRUCK BED MOLLE PANELS

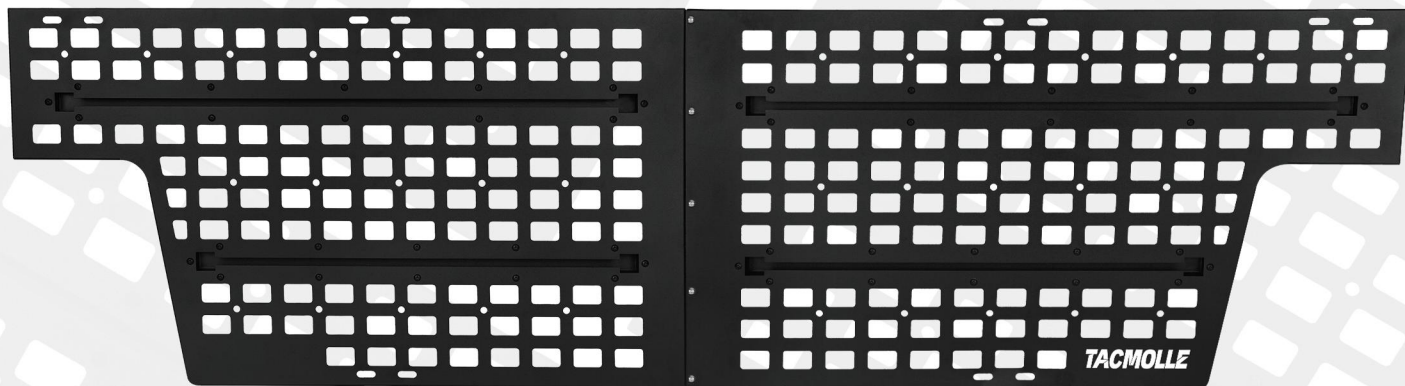


20672/20673

PACKAGE INCLUDED

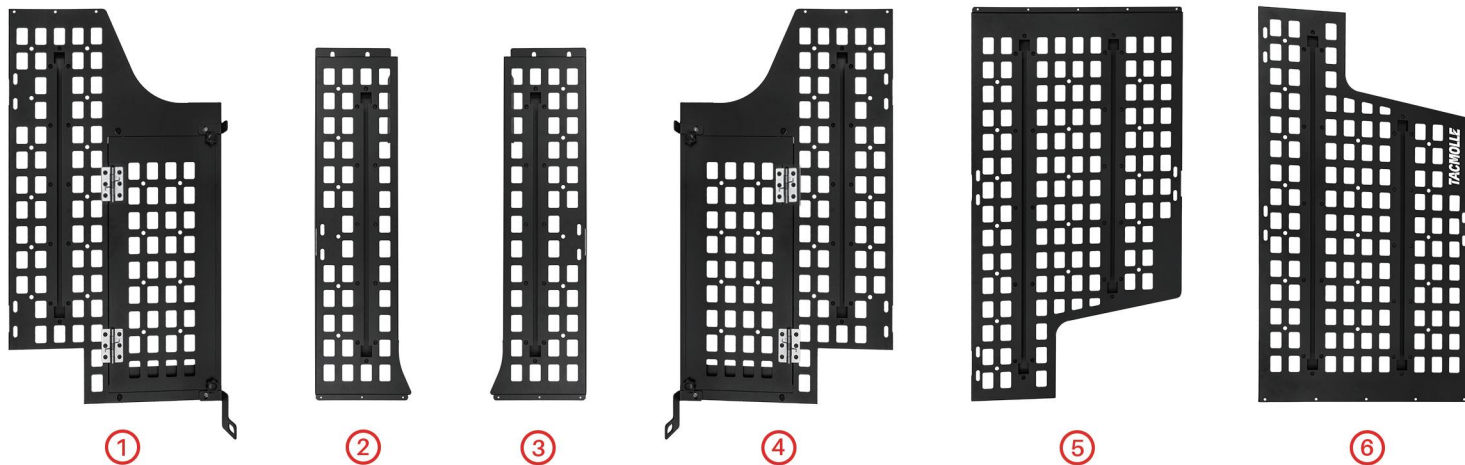


Note: This manual includes two installation methods: **Trail Rail System** and **Without Trail Rail System**. Please read the relevant sections for proper installation.

INSTALLATION INSTRUCTIONS

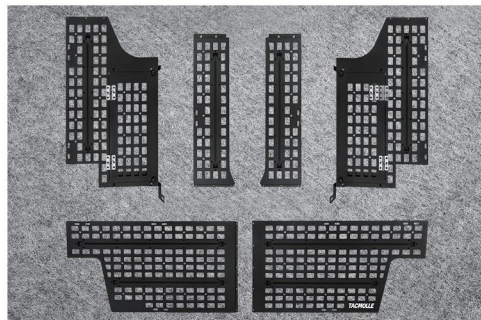


1. Prepare all parts and tools needed for installation.

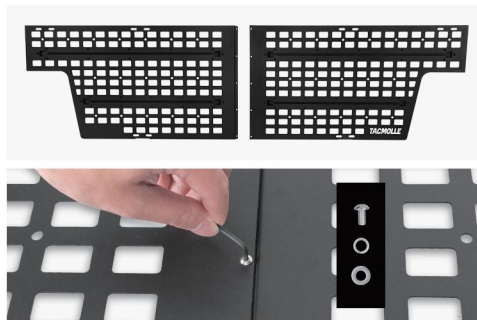


2. Connect ⑤ and ⑥, securing them with ⑱, ②②, and ②① in sequence in five mounting holes.




3. Attach ⑩ using ⑰, ②①, and ⑲ in sequence, but do not fully tighten yet. (Trail Rail System)

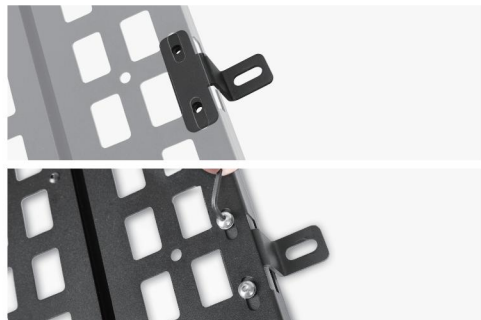

4. Attach ⑨ using ⑰, ②①, and ⑲ in sequence, but do not fully tighten yet. (Without Trail Rail System)

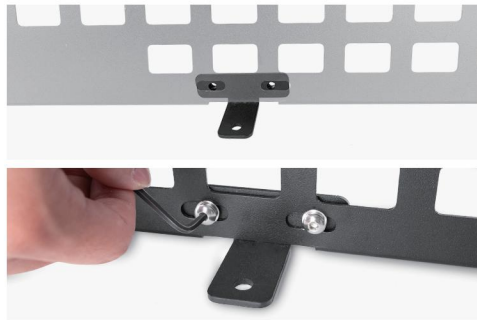


5. Connect ⑪ at the bottom using ⑰, ②①, and ⑲ in sequence, but do not fully tighten yet.

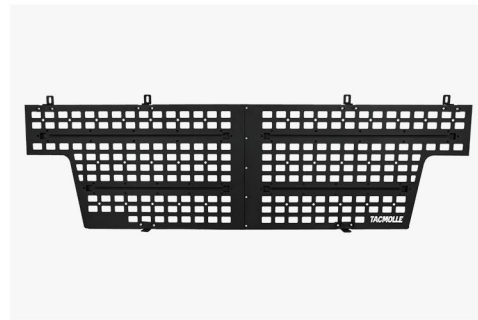


6. Connection appearance.
-If you purchased the single side panel with rails, go to [Step 17](#).
-If you purchased the single side panel without rails, go to [Step 44](#).


INSTALLATION INSTRUCTIONS

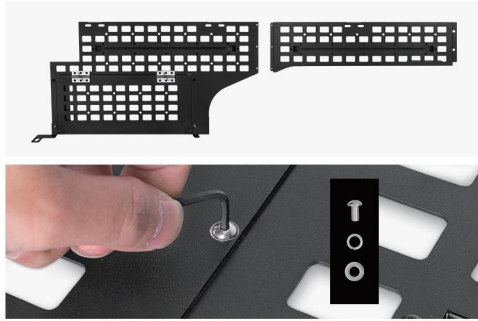

7. Connect ① and ②, securing them with ⑱, ②②, and ②① in sequence in three mounting holes.

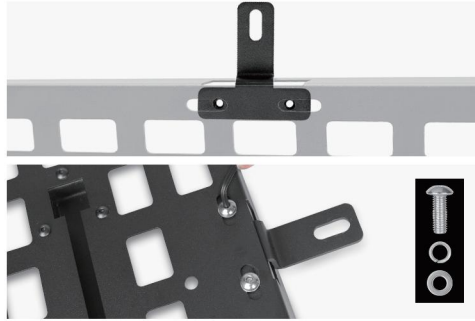


8. Attach ⑧ using ⑰, ②①, and ②② in sequence, but do not fully tighten yet. (Trail Rail System)

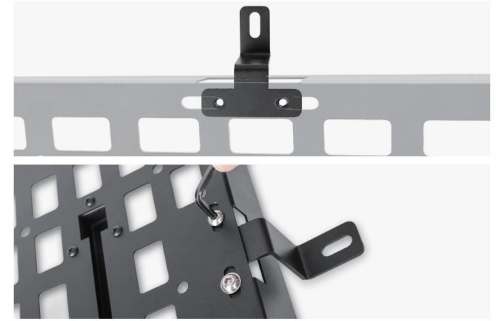


9. Attach ⑦ using ⑰, ②①, and ②② in sequence, but do not fully tighten yet. (Without Trail Rail System)



10. As shown, tighten two ⑬ into the holes marked in red to secure the panel.

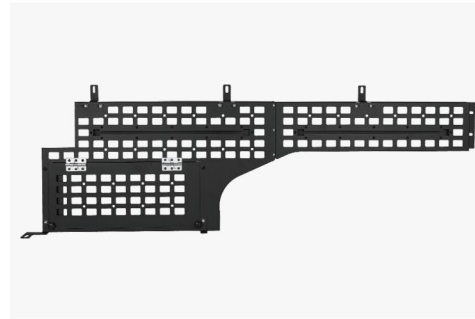


11. Connection appearance.

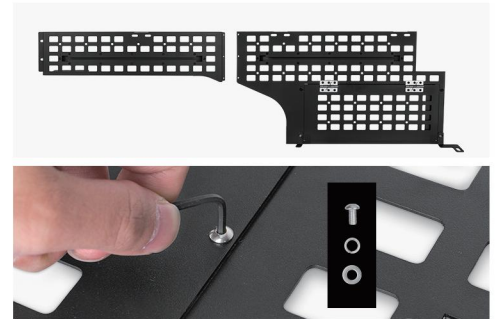


12. Connect ③ and ④, securing them with ⑱, ②②, and ②① in sequence in three mounting holes.

INSTALLATION INSTRUCTIONS

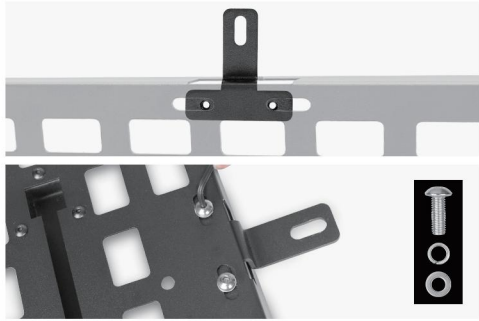


13. Attach ⑧ using ⑯, ⑳, and ㉑ in sequence, but do not fully tighten yet. (Trail Rail System)

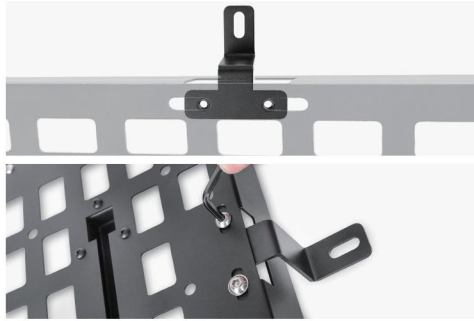

14. Attach the ⑦ using ⑰, ⑳, and ㉑ in sequence, but do not fully tighten yet. (Without Trail Rail System)



15. As shown, tighten two ⑬ into the holes marked in red to secure the panel.

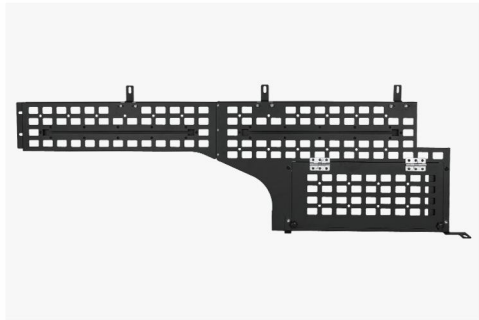

16. Connection appearance.

INSTALLATION INSTRUCTIONS - Trail Rail System



17. Prepare for front side installation.



18. Remove the end cap from slide rail and insert four ⑫, then reinstall the cap.



19. Insert the ⑤-⑥ assembly and align the bottom ⑪ with the groove.



20. Align the top ⑩ with ⑫, then tighten them in sequence using ⑭, ⑳, and ⑲.



21. Use a Phillips screwdriver to fasten the self-tapping screw ⑮ into the vehicle body.



22. Installed view of the front side.

INSTALLATION INSTRUCTIONS - Trail Rail System



23. Prepare for driver side installation.



24. Remove the D-ring tie-down at the rear corner and set it aside for later use.
Note: The washer inside the mounting hole can be left in place.



25. Remove the tie-down hook at the front corner and set it aside for later use.



26. Remove the end cap from slide rail and insert three ⑫, then reinstall the cap.
Note: Remove any other components from the rail before proceeding.



27. Insert the ①-② assembly. Align with the mounting holes of front corner tie down hook and rear corner D-ring tie-down.



28. Reinstall the D-ring tie-down.

INSTALLATION INSTRUCTIONS - Trail Rail System



29. Reinstall the tie-down hook.



30. Align ⑧ with ⑫, then tighten them in sequence using ⑭, ②①, and ②②.



31. Use a Phillips screwdriver to fasten the self-tapping screw ②③ into the vehicle body.



32. Installed view of the driver side.



33. Prepare for passenger side installation.




34. Remove the D-ring tie-down at the rear corner and set it aside for later use.
Note: The washer inside the mounting hole can be left in place.

INSTALLATION INSTRUCTIONS - Trail Rail System



35. Remove the tie-down hook at the front corner and set it aside for later use.

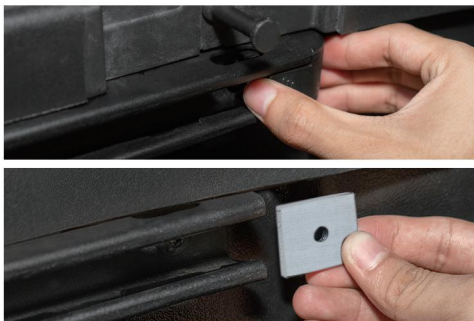

36. Remove the end cap from slide rail and insert three ⑫, then reinstall the cap. Note: Remove any other components from the rail before proceeding.



37. Insert the ③-④ assembly. Align with the mounting holes of front corner tie down hook and rear corner D-ring tie-down.



38. Reinstall the D-ring tie-down.



39. Reinstall the tie-down hook.




40. Align ⑧ with ⑫, then tighten them in sequence using ⑭, ⑲, and ⑲.

INSTALLATION INSTRUCTIONS - Trail Rail System



41. Use a Phillips screwdriver to fasten the self-tapping screw ⑮ into the vehicle body.

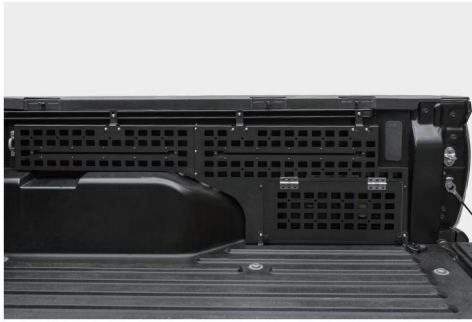

42. Installed view of the passenger side.




43. Tighten all screws and confirm all panels are secure and stable. Installation completed.

INSTALLATION INSTRUCTIONS - Without Trail Rail System



44. Prepare for front side installation.

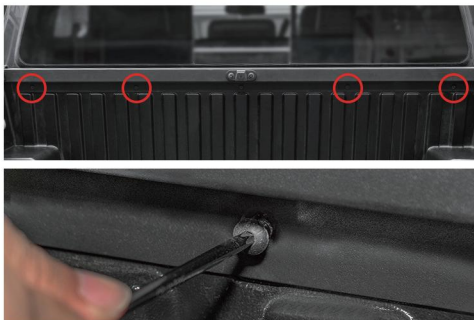

45. Remove the four original screws marked in red on the top and set them aside for later use.



46. Insert the ⑤-⑥ assembly and align it with the original mounting holes, then align the bottom ⑪ with the groove.



47. Tighten with four original screws.



48. Use a Phillips screwdriver to fasten the self-tapping screw ⑮ into the vehicle body.



49. Installed view of the front side.

INSTALLATION INSTRUCTIONS - Without Trail Rail System




50. Prepare for driver side installation.



51. Remove the three original screws marked in red on the top and set them aside for later use.



52. Remove the D-ring tie-down at the rear corner and set it aside for later use.
Note: The washer inside the mounting hole can be left in place.

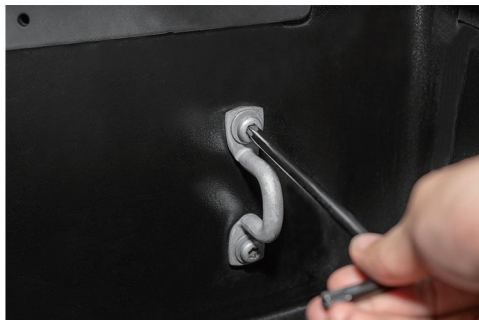

53. Remove the tie-down hook at the front corner and set it aside for later use.



54. Insert the ①-② assembly. Align with the mounting holes of front corner tie down hook and rear corner D-ring tie-down.



55. Reinstall the D-ring tie-down.

INSTALLATION INSTRUCTIONS - Without Trail Rail System



56. Reinstall the tie-down hook.



57. Tighten with three original screws.




58. Use a Phillips screwdriver to fasten the self-tapping screw ⑮ into the vehicle body.



59. Installed view of the driver side.



60. Prepare for passenger side installation.

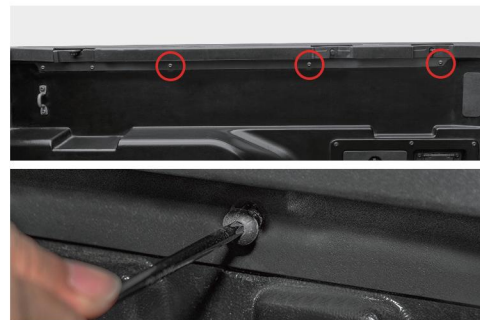

61. Remove the three original screws marked in red on the top and set them aside for later use.

INSTALLATION INSTRUCTIONS - Without Trail Rail System



62. Remove the D-ring tie-down at the rear corner and set it aside for later use.
Note: The washer inside the mounting hole can be left in place.



63. Remove the tie-down hook at the front corner and set it aside for later use.



64. Insert the ③-④ assembly. Align with the mounting holes of front corner tie down hook and rear corner D-ring tie-down.



65. Reinstall the D-ring tie-down.



66. Reinstall the tie-down hook.




67. Tighten with three original screws.

INSTALLATION INSTRUCTIONS - Without Trail Rail System



68. Use a Phillips screwdriver to fasten the self-tapping screw ⑮ into the vehicle body.

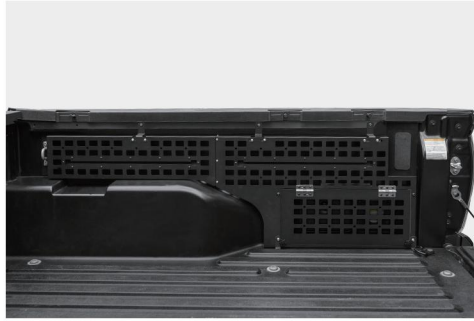

69. Installed view of the passenger side.



70. Tighten all screws and confirm all panels are secure and stable. Installation completed.

TACMOLLE